


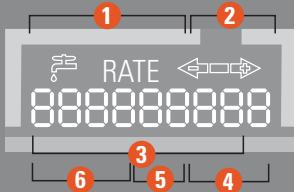


Reading your Water Meter

- Replaceable Battery 1
- Antenna 2
- Light Sensor 3
- Flow Indicators 4
- Date of Manufacture 5
- LCD Display 6
- T-10 Meter 7

E-Coder R900i™



	<p>LIGHT SENSOR Recessed under the small hole near the center of the faceplate of the E-Coder)R900i, supplies the power for the LCD panel (light activated).</p>
	<p>FLOW INDICATOR Shows the direction of flow through the meter: ON Water in use. OFF Water not in use. FLASHING Water is running slowly. (-) Reverse flow. (+) Forward flow.</p>
	<p>LEAK INDICATOR Displays a possible leak: OFF No leak indicated. FLASHING Intermittent leak indicates that water has been used for at least 50 of the 96 15-minute intervals during a 24-hour period. ON CONTINUOUSLY Indicates water use for all 96 15-minute intervals during a 24-hour period.</p>
<p>RATE</p>	<p>RATE OF FLOW Average flow rate is displayed every six seconds on LCD display.</p>
	<p>LCD DISPLAY Nine-digit LCD displays the meter reading in billing units of measure: U.S. gallons, cubic feet, Imperial gallons, or cubic metres.</p> <ul style="list-style-type: none"> 1 E-Coder® Basic Reading/Customary 6-digit remote reading 2 Customary sweep hand digits 3 E-Coder PLUS Reading (8-digit remote reading) 4 Testing units used for diagnostics 5 Extended reading units 6 Customary billing units